

INSTALLATION INSTRUCTIONS




FULL LENGTH

MIRRORS

All Bower mirrors include mounting hardware and are designed to be hung, not leaned. When your mirror arrives, one of the two brackets will already be attached to the back of the mirror. Install the second bracket on your wall by following the steps below.

1. Measure 63" (160 cm) from the floor to the bottom of the mounting bracket.
2. Use the screws provided to mount the bracket to drywall. Start with the center screw, then use a level to straighten the bracket before adding the remaining screws.
3. Lift the mirror up at least 2" (5 cm) off the floor to clear the bracket on the wall. With the mirror against the wall, slowly lower it until the brackets securely clip together and the mirror is hanging slightly above the floor.
4. Look into mirror and pat yourself on the back :)

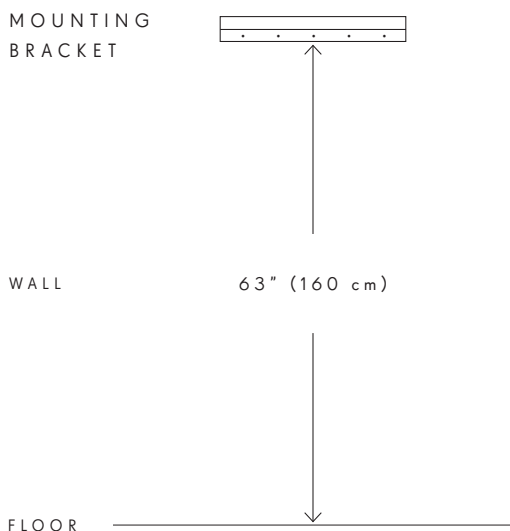

BOWER